


Drop Down Ladder Racks



Clamp & Lock Ladder Racks



Crossbar Racks

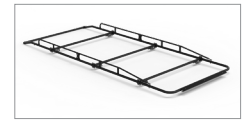

Cargo Racks

Passenger Side Driver Side

Passenger Side Driver Side

2 Bars 3rd Bar

(5 Crossbars)

Model	Passenger Side	Driver Side	Passenger Side	Driver Side	2 Bars	3rd Bar	Crossbars
GM							
CHEVY EXPRESS, GMC SAVANA Factory Preassembled Double Drop Down Rack *Required Mount Kit	4092L* 4095L*	40963	4082L*	4081L	40823	40824	80160*
	409CD		408CC				4089C
FORD							
TRANSIT LOW ROOF Factory Preassembled Double Drop Down Rack *Required Mount Kit	4092L* 4095L*	40963	4082L*	4081L	40821*	40822	80160*
	409TD		408TC				4089T
TRANSIT MID/HIGH ROOF *Required Mount Kit	4099H* 409TD	40913					
TRANSIT CONNECT *Required Mount Kit	40933	40943	4080L	4081L	40821	40822	80100* 4089D
MERCE zDES							
METRIS Factory Preassembled Double Drop Down Rack *Required Mount Kit The 4092L, 4082L & 40821 racks will only fit 126" WB Metris vans	4092L* 4095L*	40963	4082L*	4081L	40821	40822	
	4081M		4081M				
SPRINTER STANDARD ROOF *Required Mount Kit	4097M* 4081S	40983			40821	40822	80160* 4089T
SPRINTER HIGH ROOF *Required Mount Kit	4099H* 4081S	40913					
NISSAN							
NV LOW ROOF Factory Preassembled Double Drop Down Rack *Required Mount Kit	4092L* 4095L*	40963	4082L*	4081L	40821	40822	80160*
	409ND		408NC				4089T
NV HIGH ROOF *Required Mount Kit	4099H* 409ND	40913					
NV200 (MOUNT KIT INCLUDED) 40821 w/2 Retractable Ratchet Straps	40933	40943	4080L	4081L	40821 40819	40822	80100* 4089D
RAM							
PROMASTER LOW ROOF *Required Mount Kit	4097M* 4081P	40983			40821* 40918	40822	80160* 4089P
PROMASTER HIGH ROOF *Required Mount Kit	4099H* 4081P	40913					
PROMASTER CITY *Required Mount Kit	40933	40943	4080L	4081L	40821	40822	80100* 4089D

For detailed product information and accessories visit: holman.com/vehicle-upfitting-equipment/equipment-racks/



Drop Down Ladder Racks



Clamp & Lock Ladder Racks



Crossbar Racks



Cargo Racks

Passenger Side Driver Side

Passenger Side Driver Side

2 Bars 3rd Bar

(5 Crossbars)

Model	Passenger Side	Driver Side	Passenger Side	Driver Side	2 Bars	3rd Bar	Crossbars
GM							
CHEVY EXPRESS, GMC SAVANA	4A93L*	4A96L	4A82L*	4A81L	4A823	4A824	8016A*
Factory Preassembled Double Drop Down Rack	4A95L*						
*Required Mount Kit	409CD		408CC				4089C
FORD							
TRANSIT LOW ROOF	4A93L*	4A96L	4A82L*	4A81L	4A821*	4A822	8016A*
Factory Preassembled Double Drop Down Rack	4A95L*						
*Required Mount Kit	409TD		408TC				4089T
TRANSIT MID/HIGH ROOF	4A99H*	4A91H					
Factory Preassembled Double Drop Down Rack	4A95H*						
*Required Mount Kit	409TD						
TRANSIT CONNECT	4A97L	4A98L	4A80L	4A81L	4A821	4A822	8010A*
Factory Preassembled Double Drop Down Rack	4A95C						
*Required Mount Kit							4089D
MERCEDES							
METRIS	4A97L	4A98L	4A80L	4A81L	4A821	4A822	
Factory Preassembled Double Drop Down Rack	4A95C						
SPRINTER STANDARD ROOF	4A93M*	4A96M			4A821	4A822	8016A*
Factory Preassembled Double Drop Down Rack	4A95M*						
*Required Mount Kit	4081S						4089T
SPRINTER HIGH ROOF	4A99H*	4A91H					
Factory Preassembled Double Drop Down Rack	4A95H*						
*Required Mount Kit	4081S						
NISSAN							
NV LOW ROOF	4A93L*	4A96L	4A82L*	4A81L	4A821	4A822	4089A*
Factory Preassembled-Assembled Double Drop Down Rack	4A95L*						
*Required Mount Kit	409ND		408NC				4089T
NV HIGH ROOF	4A99H*	4A91H					
Factory Preassembled Double Drop Down Rack	4A95H*						
*Required Mount Kit	409ND						
NV200	4A97L	4A98L	4A80L	4A81L	4A821	4A822	8010A*
Factory Preassembled Double Drop Down Rack	4A95C						
*Required Mount Kit							4089D
PROMASTER STANDARD ROOF							
Factory Preassembled Double Drop Down Rack	4A93M*	4A96M			4A821*	4A822	8016A*
Required Mount Kit	4A95M						
	4081P				40918		4089P
PROMASTER HIGH ROOF							
Factory Preassembled Double Drop Down Rack	4A99H*	4A91H					
Required Mount Kit	4A95H						
	4081P						
PROMASTER CITY							
Factory Preassembled Double Drop Down Rack	4A97L	4A98L	4A80L	4A81L	4A821	4A822	8010A*
*Required Mount Kit	4A95C						
							4089D