




40260 Installation Instructions Transit Low Roof (MWB,LWB)



Step 1

- Assemble 40260
- Bolt rear mount to rotating disc in the rear of the pre assembled pivot pro.
- Bolt 11-02049 to side of pre assembled pivot pro.

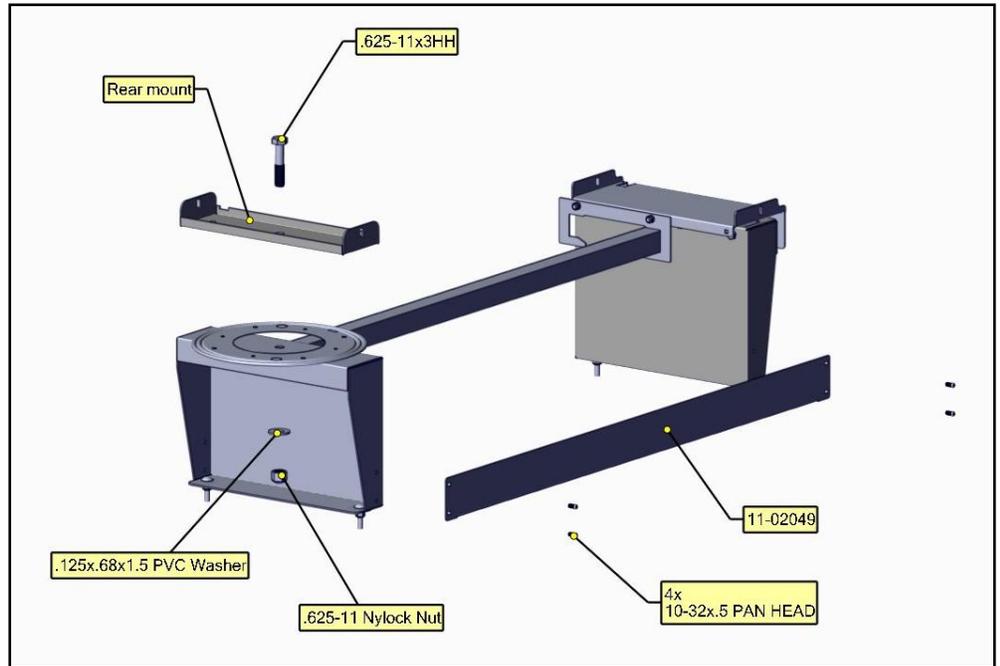


Step 2


- Bolt top rail and rear mount to pre assembled 40250.
- Be sure to place .625-11 x 1.5HH under rear mount.

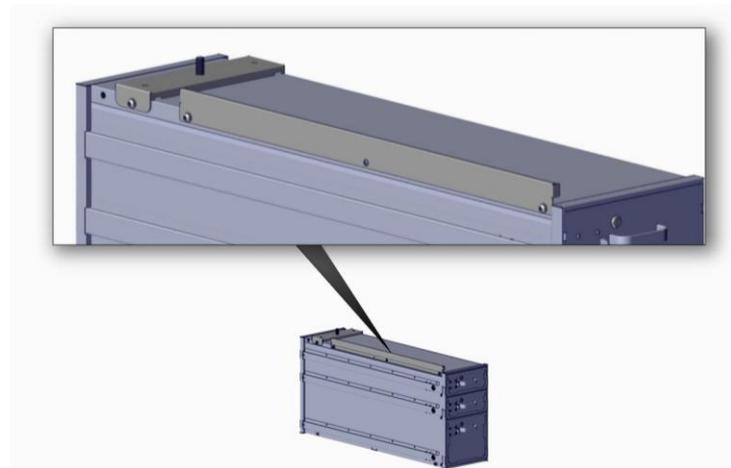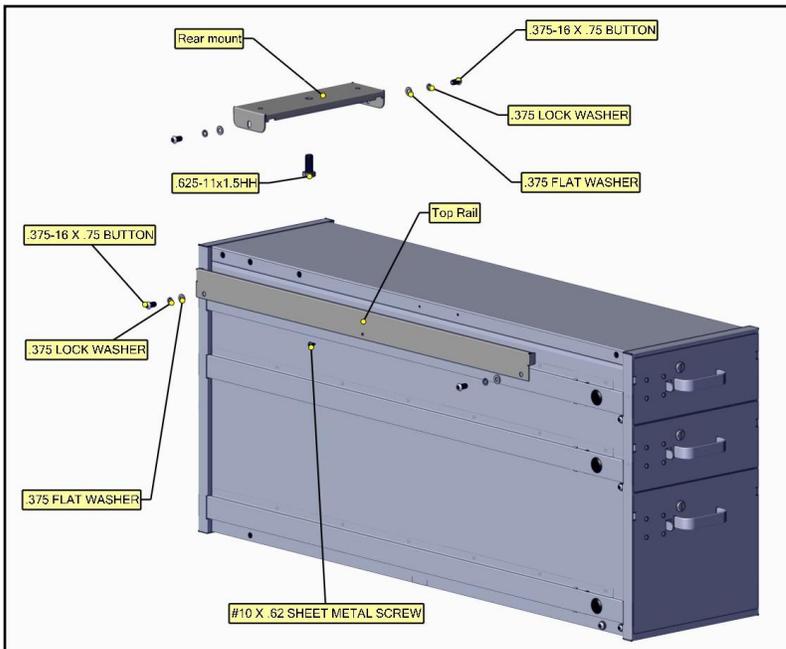


Installation in Low Roof, Mid Wheel Base Ford Transit

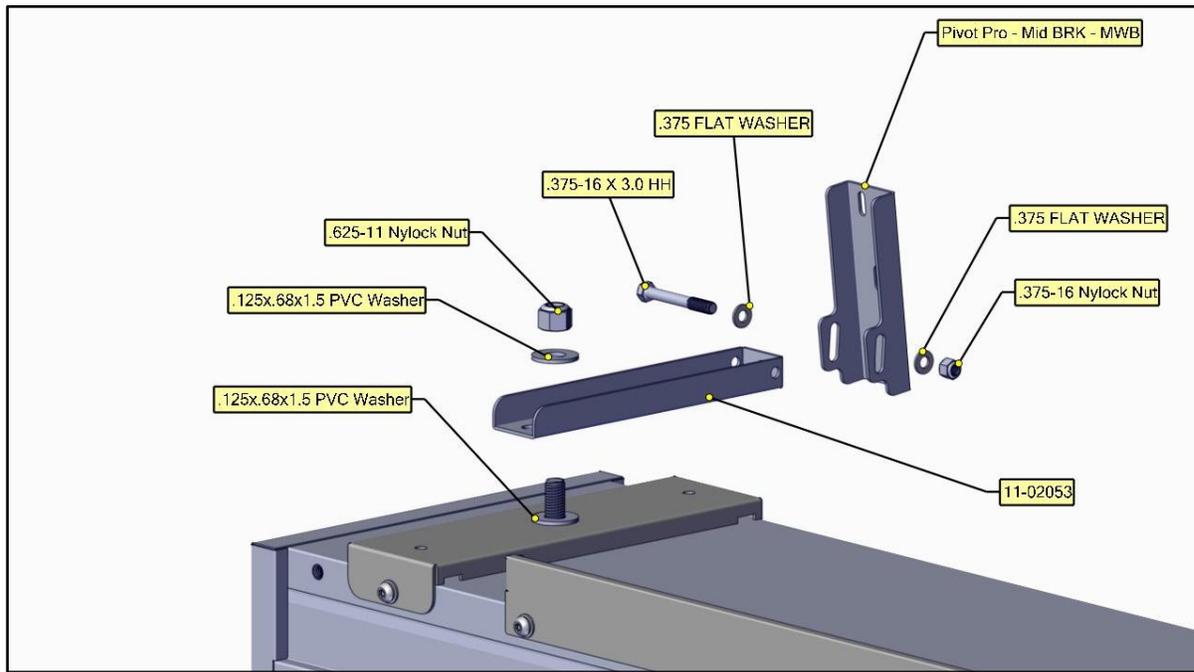


- Mount Mid BRK - MWB to 11-02053. Mount that to the rear of 3 drawer unit.
- Mount through the middle slot on 11-02053.
- Do not tighten .625 Nylock Nut.
- Position of 11-02053 may need to be adjusted in order for easy assembly.
- Be sure to have plastic washer in between rear mount and 11-02053.

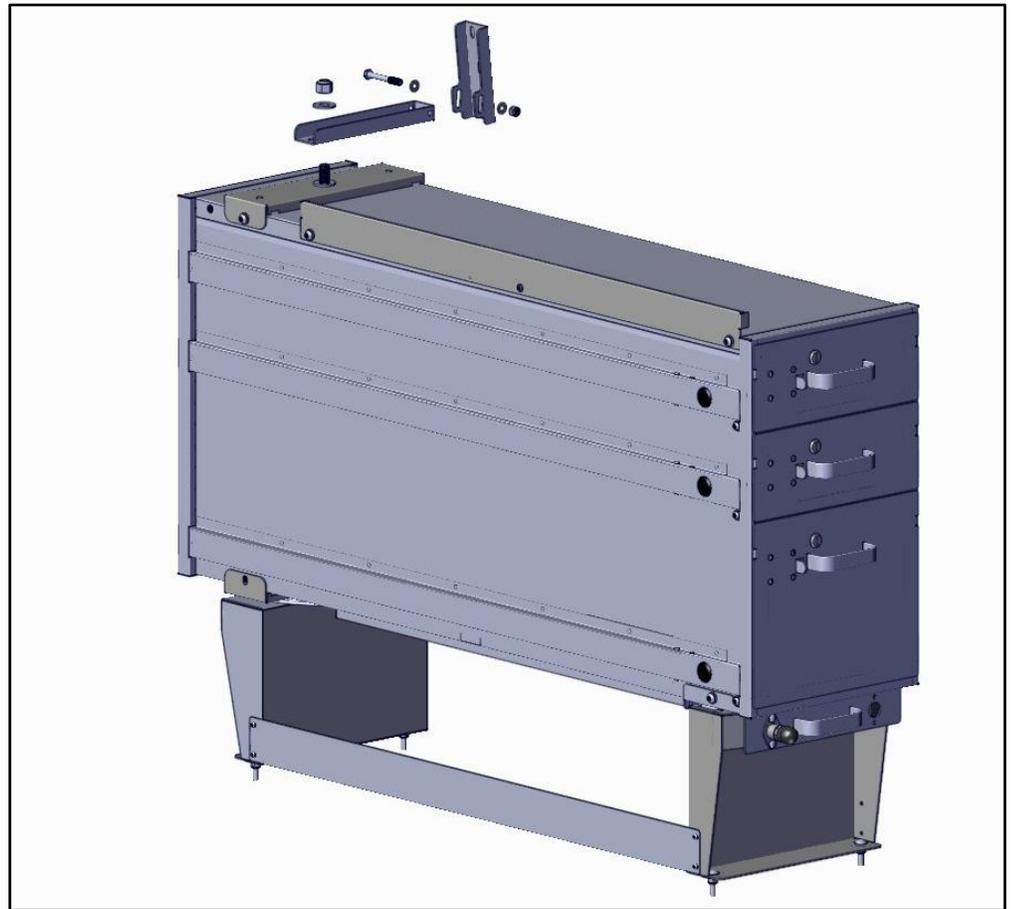

Installation in Low Roof, Long wheel base Ford Transit

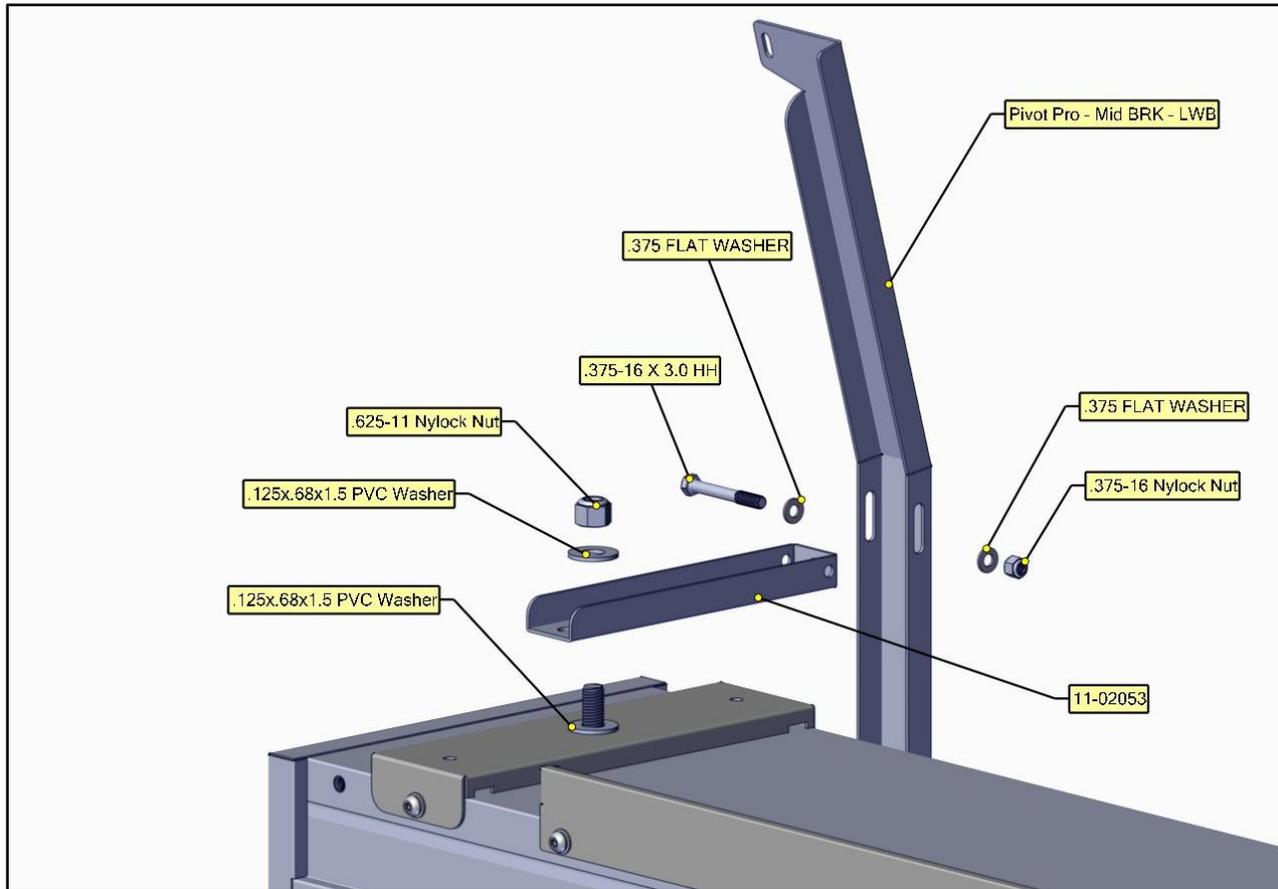


- Mount Mid BRK - LWB to 11-02053. Mount that to the rear of 3 drawer unit.
- Mount through the middle slot on 11-02053.
- Do not tighten .625 Nylock Nut.
- Position of 11-02053 may need to be adjusted in order for easy assembly.
- Be sure to have plastic washer in between rear mount and 11-02053.

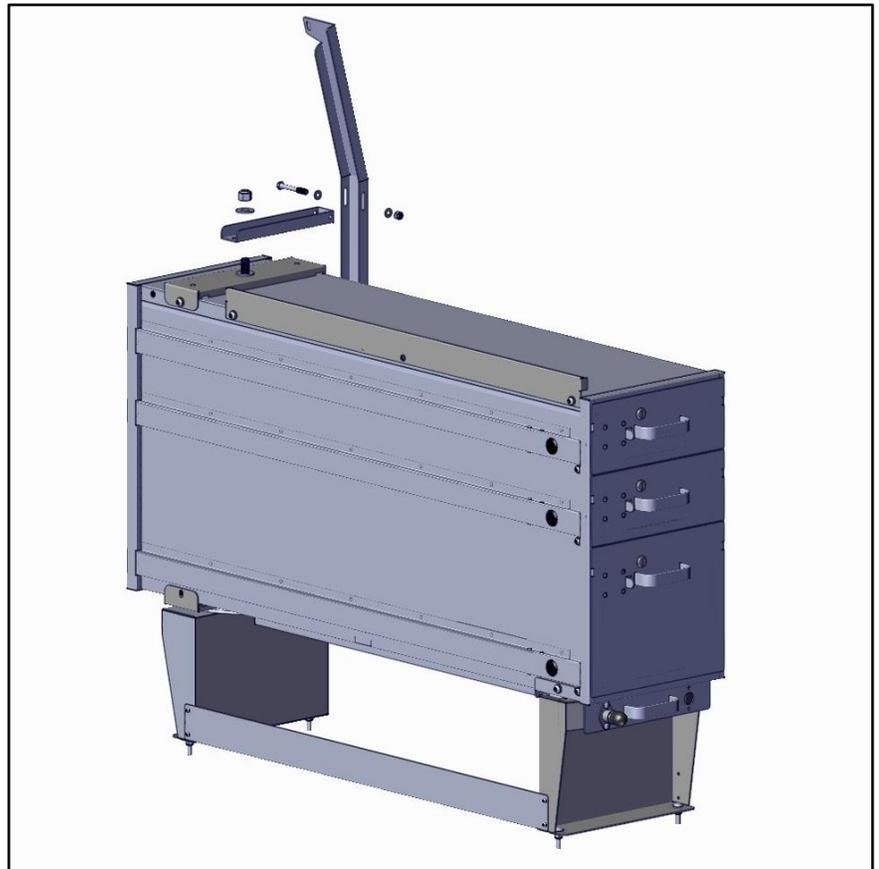

Installation to access from rear of van

- Place Pivot pro assembly into passenger side of van over the wheel well.
- Place 3 Drawer unit onto pivot pro inside of van.
- Pivot 3 Drawer unit away from wall to clear rear opening. Be sure to open 3 drawer unit to ensure clearance.
- Align mid support bracket on "C" pillar (MWB), or on threaded embossed holes (LWB)
 - *When mounting in MWB, Mark through the bracket on the "C" pillar. Drill and Insert plus nuts into marked holes on "C" pillar.*

****Adjustment of 11-02053 may be needed****

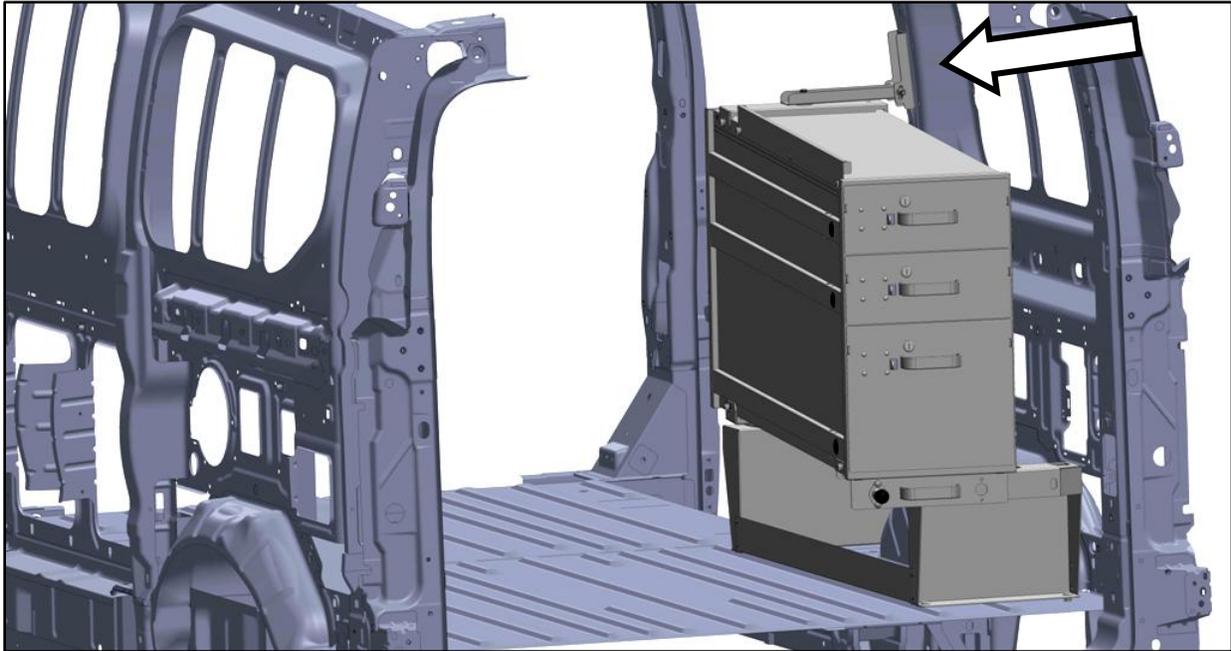


Low Roof, MWB Van Shown

- Once everything is aligned, Mark through the base of the pivot pro onto the floor of the van.
- Look underneath van and make sure you will not drill through anything important.
- Remove pivot pro and 3 drawer assembly.
- Drill through previously marked holes.

Step 3

- With assembly removed from van, remove rear mount from the top of the 3 drawer unit.
- Tighten .625 bolt through the rear mount and 11-02053.
- Be sure to use the same slot in 11-02053 as you did when aligning in the van.


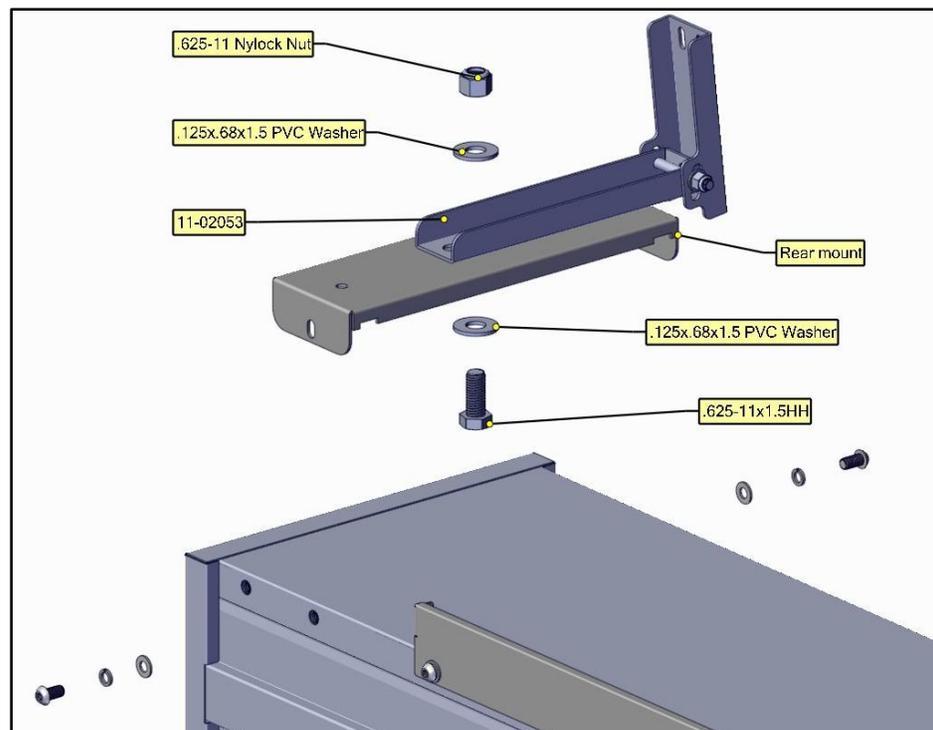


Step 4

- Insert Pivot pro and 3 Drawer back into van.
- Align base of pivot pro with the previously drilled holes into the floor.
- Bolt base of pivot pro through floor. Be sure to put fender washers on bottom side, underneath van.

Step 5

- Bolt mid support to wall of van.
- If installing on a MWB, use previously placed pem nuts.
- If installing on a LWB, pick up embossed holes in side of van.

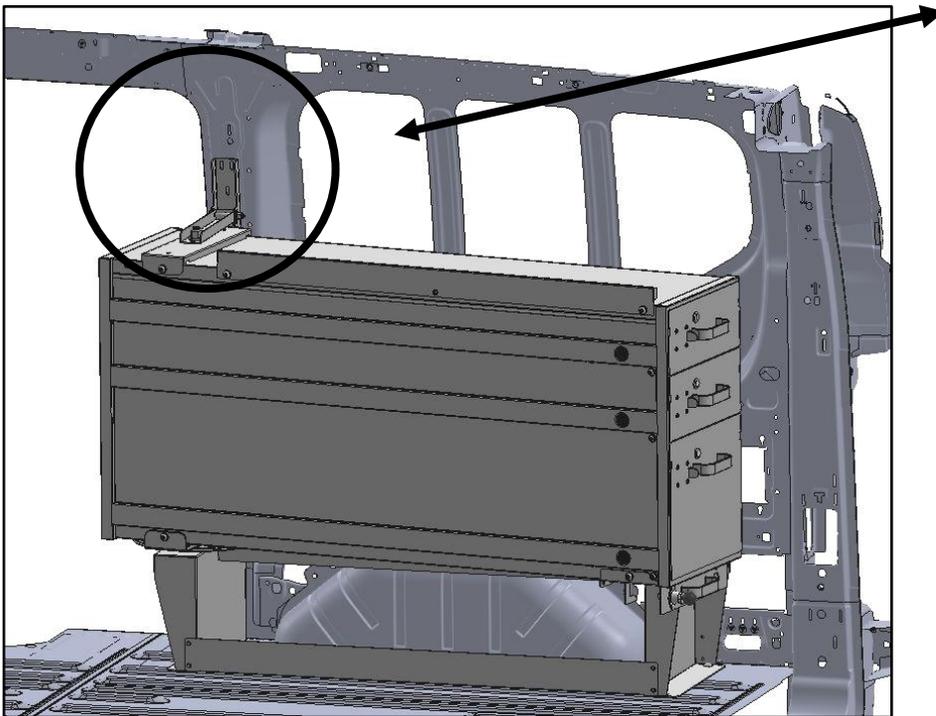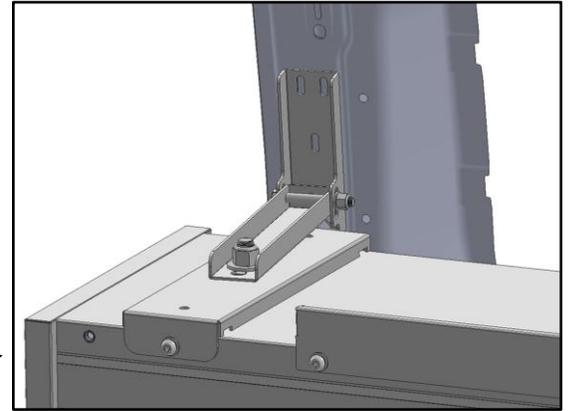

Step 6




- Be sure all bolts are tight
- Ensure full functionality of all 3 drawers.

Your installation is now complete

See next page for Ford E Series

40260 Installation

- 1) Set base(40260) approximately where desired. Bolt box(40250) to base(40260).
- 2) Attach top mount(Item 2,24&23)to box (40250). Adjust to fit the structural part of the wall in the van. Check clearance around the unit, it should be a minimum of 1/2". Mark and drill mounting holes.
- 3) Mark and drill holes for the base(40260) in the floor of the van. Bolt unit down.

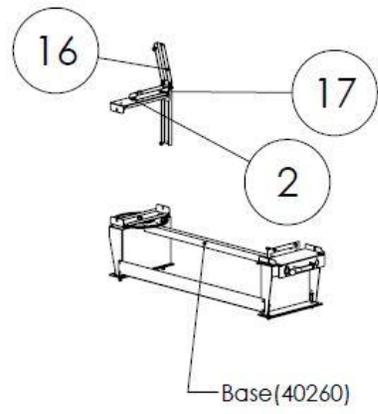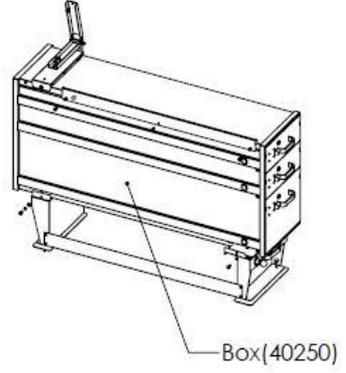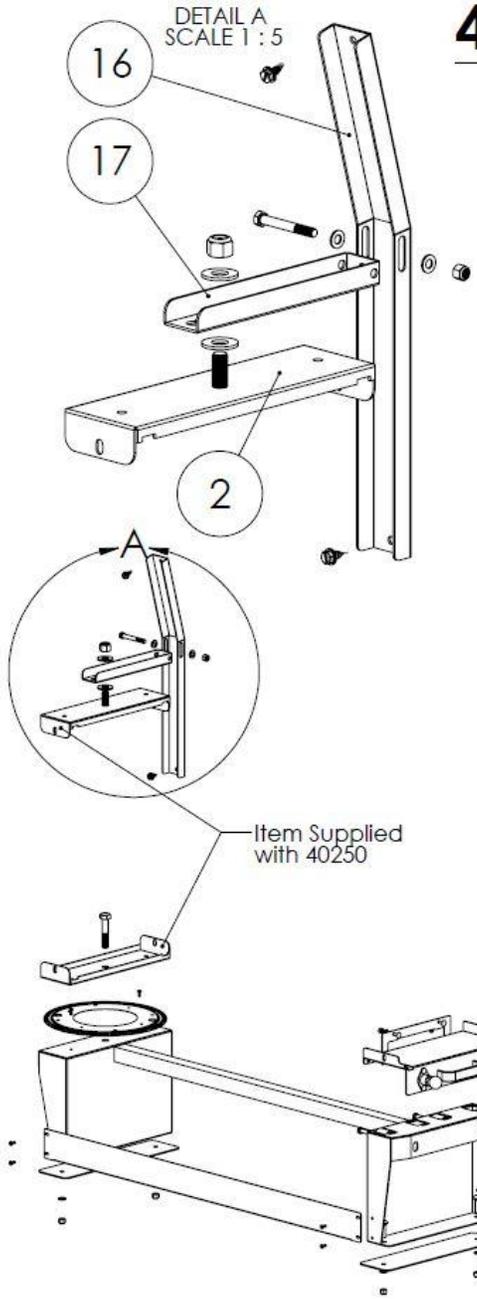

40260 Parts List

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|---------------------------|--------------------------|------|
| 1 | 13-02021 | Base Weldment | 1 |
| 2 | 11-04032 | | 2 |
| 3 | 13-02022 | Front Mount Assembly | 1 |
| 4 | 11-02044 | ROLLER-FRONT | 2 |
| 5 | .625-11x1.5HH | 5/8-11x1.5 Hex Bolt | 1 |
| 6 | 13-02020 | Latch Assembly | 1 |
| 7 | 11-02048 | Stop-Swing Base | 1 |
| 8 | .125x.68x1.5 PVC Washer | 95611A037-WASHER-PVC | 3 |
| 9 | .625-11 Nylock Nut | 5/8-11 Nylock Nut | 2 |
| 10 | .625-11x3.0 HH | 5/8-11x3.0 Hex Bolt | 1 |
| 11 | .375 Flat Washer | 3/8 Flat Washer | 8 |
| 12 | 11-02046 | BACK UP PLATE | 2 |
| 13 | .375-16 Nylock Nut | 3/8-16 Nyloc Nut | 7 |
| 14 | .25 Flat Washer | 1/4 Flat Washer | 4 |
| 15 | .25-20 Nylock Nut | 1/4-20 Nylock Nut | 4 |
| 16 | 11-02052 | Top Mount-Wall | 1 |
| 17 | 11-02053 | Top Mount-Box | 1 |
| 18 | 1797K200 | Turntable | 1 |
| 19 | 10-32x.5 PH | 10-32x.5 Pan Head | 6 |
| 20 | 10-32 Nylock Nut | 10-32 Nylock Nut | 6 |
| 21 | .25-20x.625 Carriage Bolt | 1/4-20x5/8 Carriage Bolt | 4 |
| 22 | .375-16x3.0 Hex Bolt | 3/8-16x3.0 Hex Bolt | 3 |
| 23 | .375X1.5 Carriage Bolt | 3/8x1.5 Carriage Bolt | 4 |
| 24 | 11-02049 | Bottom Lip | 1 |
| 25 | .312x.75 Self Tapping | 5/16x3/4Self Tapping | 2 |

