
Holman

Installation Guide 40450



Holman Rancho Cordova, CA 95742 800-343-7486 InstallationSupport@Holman.com

DATE:____

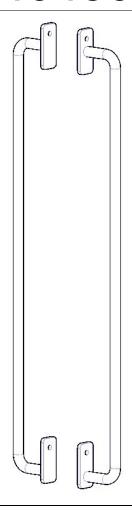

PLEASE READ ALL INSTRUCTIONS AND WARNINGS PRIOR TO ASSEMBLING, INSTALLING, AND USING THIS PRODUCT

Warning



Always check for wires, fuel tanks and lines, brake lines and other important vehicle functionality items prior to drilling and installing all products.

Tools Needed

M17 Wrench and Socket

Table of Contents

Parts List	2
Hardware List	
Step 1 Van Location	
Step 2 Top Installation	
Step 3 Bottom Installation	
Step 4 Align	



Before You Begin

• Read all instructions

<u>Parts</u>

	40450 Parts List	PART NUMBER	DESCRIPTION	QTY.
A		40450-10	Rear Transit Grab Handle	2

<u>Hardware</u>




ITEM NO.	18-40450 To Scale	PART NUMBER	DESCRIPTION	QTY.
1		91280A636	M10x1.5 x 35mm Hex	4
2		91166A280	M10 Flat Washer	6
3		91202A242	M10 Split Lock Washer	2
4		94645A220	M10x1.5 NYLOC	2



Step 1 – Locate mount location in rear of van

Α.


- Find M10 threaded emboss located about eye level on the "D" pillar in the rear of the van.
- Locate black rectangular cover near the bottom of the "D" pillar.
 Remove.

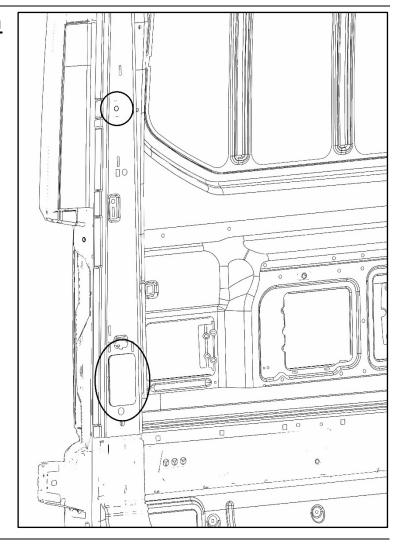




Step 2 – Attach Top


- Bolt top of grab handle to the threaded emboss.
 Use a M10 flat washer (2), a M10 lock washer (3) and a M10 x 35mm Hex Head (1).
- Follow the orientation and order of hardware as shown.

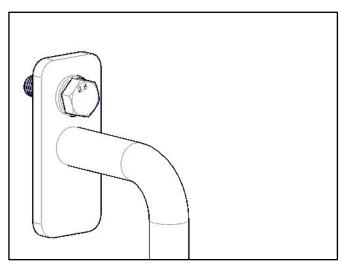


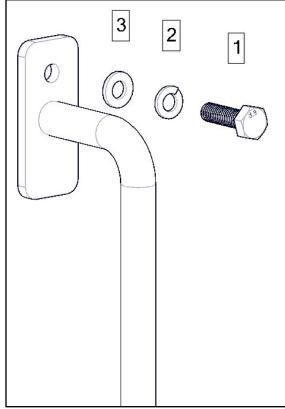

Step 3 – Attach Bottom

- Swing bottom of handle so that it lines up with the accessible hole below previously removed black cover.
- Bolt through the reinforced hole using a M10 x 35mm HH (1), two M10 flat washers (2) and a M10 nyloc nut (4).
- To reach the nyloc nut (4), you must access it through the square hole where the black cover was removed.
- Snug Tighten

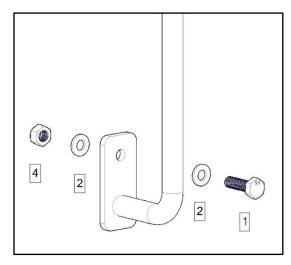

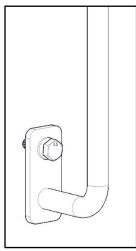



Step 4

- Align and square handle to your preference.
- TIGHTEN all previous bolts.

Your installation is now complete.

